

This PUDLO detail is to assist with the installation of its products. The detail shows PUDLO CWP Modified Concrete and how PUDLO System accessories are to be installed. For site specific details and confirmation on extent of where PUDLO CWP Modified Concrete is used i.e. Overlay drawings, must be confirmed by structural engineers/contractor. Individual/Company responsibility for design of the structure must ensure that details shown on PUDLO drawings match the latest construction issue designs.


## The information shown on this detail is given without obligation, or warranty PRIOR to consultation or communication with PUDLO/DBG Ltd.

Note:

Note:-

An alternative option to installing the membrane to maintain a straight profile within the liner wall, is to fix PUDLO BW Membrane to timber stop-end. Engineer to specify backfill material for structural requirements.

Prior to membrane and concrete application please consult with PUDLO.

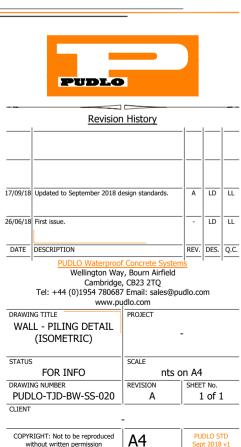

without written permission